

ZODIAC RANGE

INSTRUCTION OF USE

To adjust back height hold back with two hands while seated and raise to desired height

To lower the back height raise back all the way to the top and release slowly

ADJUSTABLE ARMS

RIGHT LEVER


To adjust seat height

700MM ALUMINIUM 5 STAR BASE WITH CASTORS

Use soft tyred castors for tiles
Use hard tyred castors for carpet

OPTIONAL ADJUSTABLE HEADREST

INDOOR USE ONLY

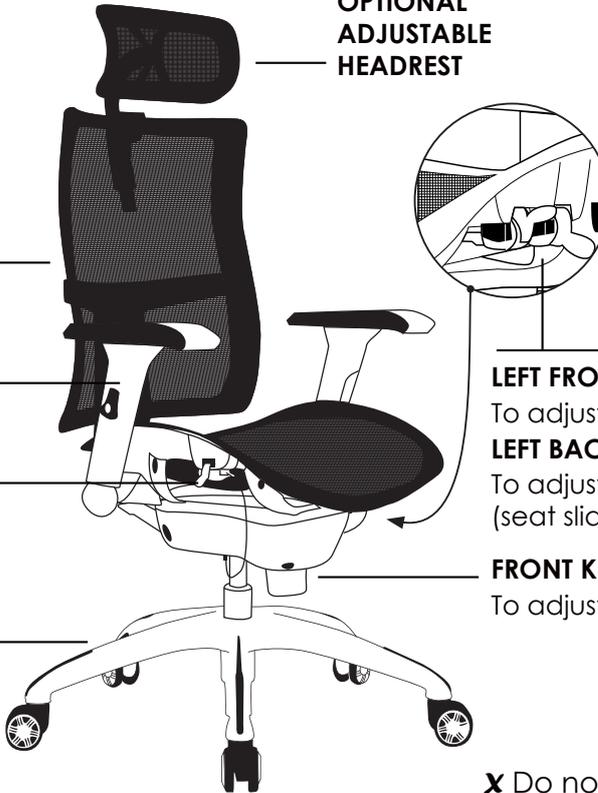

LEFT FRONT LEVER

To adjust back angle

LEFT BACK LEVER

To adjust seat depth (seat slider)

FRONT KNOB

To adjust weight tension

X Do not use as a step ladder

DIMENSIONS: (mm)

BACK BACK TO FLOOR

W: 455 Lowest: 990

H: 550 Highest: 1150

HEADREST

W: 380

H: 180

HEADREST TO FLOOR

Lowest: 1140

Highest: 1350

SEAT

W: 500

D: 490

SEAT TO FLOOR

Lowest: 515

Highest: 610

ARM TO FLOOR

Lowest: 670

Highest: 840

* Please note that the Headrest should not be used to manoeuvre the chair.



ZODIAC-H



ZODIAC-L



Back view

Features:

- Adjustable seat height cable controlled
- Adjustable back height (ratchet)
- Adjustable seat and back angle cable controlled
- Adjustable seat depth (seat slider) cable controlled
- Adjustable weight tension

- 2-Way adjustable arms
- Synchron mechanism with 3 locking positions
- 700mm aluminium 5 star base
- Available in black only
- BIFMA tested
- Suitable for indoor use only

